





- 1 LED Indicators:
  - P Power Supply
  - R Radio data receiving status
  - G GPRS connection to server status
  - I Ethernet connection to server status
- Radiostation Connectors



- 1 Not Used
- 2 Audio Input
- 3 GND
- 4 Not Used

- Ethernet Connector
- 4 Power Supply 12 VDC
- Test Button
- 6 Push-In SIM Card holder
- GPRS Mobile network antenna

