

Inova-bg Ltd.

IP Tau

Table of contents:



1.	Main features	3
2.	Start working with IP Tau	5
3.	Homepage.....	6
4.	Configuration of the main parameters	7
4.1.	General settings.....	7
4.2.	General IP settings	8
4.3.	Settings for the IP Servers.....	9
4.4.	Settings for the digital inputs	10
4.5.	Saving the new configuration	11
5.	Username and password configuration.....	12
6.	Utility.....	13
7.	Reboot.....	14
8.	Hardware reset	14
9.	Hardware Connections	15
9.1.	Hardware AC	15
9.2.	Communicator/Dialer connection	16
10.	Windows Network configuration	16

1. Main features

IP Tau is a communication device with the main purpose to transmit data from security panels and/or sensors through IP based network. Using the advantages of communication technologies IP Tau provides the most secure connection with monitoring center using various ways of back-up – 2 main servers with a backup server each.

Features:


- Power supply 12VDC (8,5V to 16V)
- Low power consumption
- Protocols – Ademco ContactID, LARS
- Network interface - IEEE 802.3 Ethernet, Fully Compatible with 10/100/1000Base-T Networks
- Static or dynamic IP address compatible with DHCP server
- Capability to use one or two fully independent IP servers
- Verification with an unique ID code
- HTML server for easy configuration and status check, protected with an username and a password
- Capability to change the username and password of the html server
- Indication (4 LEDs) for:
 - Power Supply
 - LAN Status - Ethernet available
 - LAN Activity – Network packets service
 - Server LED – Established connection with IP server/s – when using 1 server - 'ON' when connection is established. When using 2 servers - 'ON' when connection is established with both servers, blinks if connection is established with only one server , 'OFF' when connection isn't established with both servers

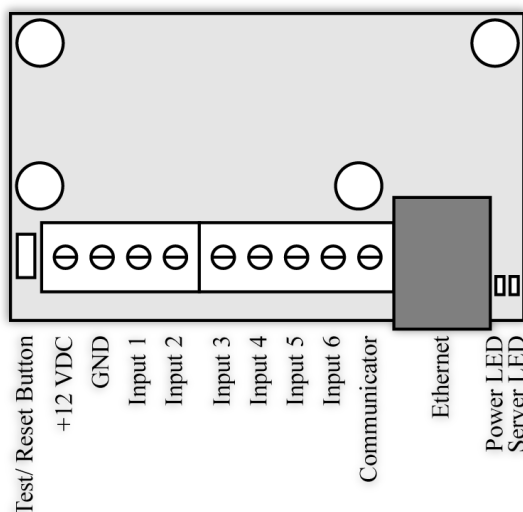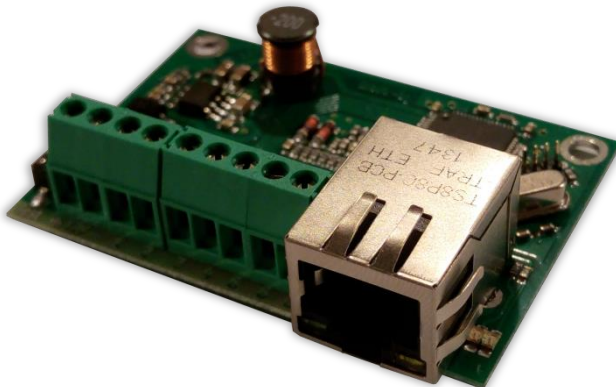

- Encrypted connection with IP servers
- Six digital inputs
- Capability to use communicator as input - using “Ademco Contact ID” protocol
- Configurable working mode for every digital input:
 - Normal Open
 - Normal Close
 - Check for AC voltage from 5V to 20V
 - Deactivated
- Configurable parameters sent for events on each digital input to IP servers

2. Start working with IP Tau

The default IP address is 192.168.1.230. Make sure that your computer is in the same IP subnet (see Chapter 10. Windows Network configuration). To access the web server for configuration use Internet Explorer (Chrome, Firefox, Opera or any other web browser) and enter the IP Tau's address - **http://192.168.1.230/** (or the new one if you already change it). Alternatively you could write **http://iptau**. If the device is accessible from that computer a connection will be established and you will be prompt to enter username and password:

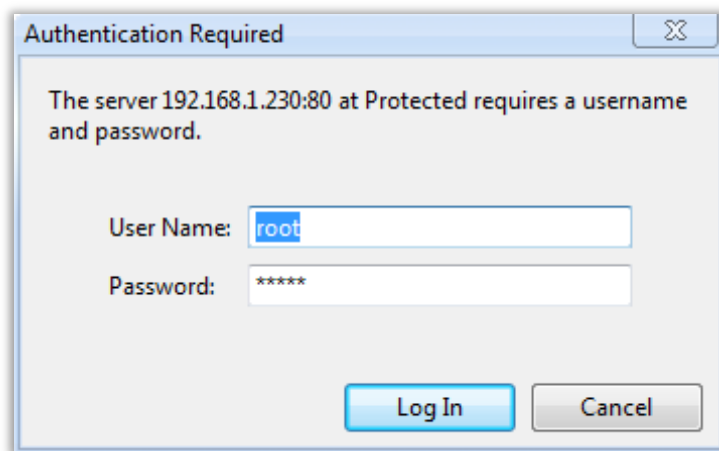

The default settings (which will be recovered after hardware reset) are:

IP Address:	192.168.1.230
Username:	root
Password:	admin

If you enter the right credentials you will have access to the web page for configuration.

3. Homepage

The screenshot displays the IP Tau homepage. At the top left is the logo 'Inova-bg Ltd'. To its right is a blue header bar with the text 'IP Tau - Ethernet Security'. On the left side, there is a vertical menu with buttons: 'Home', 'Device Config', 'Login Config', 'Utility', 'About', and 'Reboot'. The main content area features a welcome message 'Welcome to IP Tau home page!'. Below this, there are four sections of data presented in tables:

Device Information	
Device Name:	IP Tau
Account number:	5678
Device MAC:	00:04:A3:49:80:A8
Firmware version:	1.0

Power Supply	
DC Voltage:	13.6V

Last 5 Received Ademco Messages	
Last Message:	none
Message 2:	none
Message 3:	none
Message 4:	none
Message 5:	none

Digital Input Current Status	
Digital Input 1:	High
Digital Input 2:	High
Digital Input 3:	High
Digital Input 4:	High
Digital Input 5:	High
Digital Input 6:	High

At the bottom of the page, a copyright notice reads: 'Copyright © 2016 Inova-bg, Ltd. IP Tau, ver: 1.0'.

On the homepage you can find main information about the device, current status of the input voltage, last 5 messages received from the communicator and the current state of each digital input. Through the menu you could select one of the following actions:

Home – Homepage

Device Config – Configuration of the main parameters

Login Config – Configuration of username and password for web-server access

Utility – Test the connection to the servers

About – Contact information

Reboot – Restart the device

4. Configuration of the main parameters

4.1. General settings

Inova-bg Ltd

IP Tau - Ethernet Security

IP Tau Configuration

General Settings

Device Name: IP Tau

Protocol: Ademco Contact ID ▼

Account Number: 5678

Handshake Delay: 16 x 100ms

☒ **Send message if DC is lower than 10V**

Device Name – Enter the name of the device. This value is used only for user convenience – to identify devices if you have more than one connected to one network. Maximum length – 30 symbols.

Protocol – The device can use either **Ademco Contact ID** or **LARS** protocol. When using **Ademco Contact ID** the device can receive data from communicator/dialer.

System (only on LARS protocol) – System number – must range 0 to 3.


Account Number – If working with **Ademco Contact ID** protocol – each of the four symbols must be from 0 to 9 and/or from B to F.

If working with **LARS** protocol - The first 3 symbols must be from 0 to 7. The last symbol must be from 0 to 9 or from A to J. In the monitoring software you can select how to use the last symbol – as a digit or as a letter (the digits 0 to 9 correspond to the letters A to J).

Handshake Delay – According to Ademco Standard this is the delay between phone number dialing(from the control panel) and the Handshake response(from the IP Tau). The default value of 16(16x100ms = 1600ms) is working fine with most of the control panels.

Send message if DC is lower than 10V – Option that enables/disables generating of message if the input voltage drops under 10V.

4.2. General IP settings

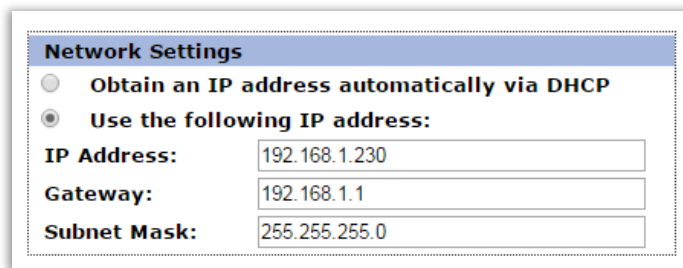

Network Settings	
<input type="radio"/>	Obtain an IP address automatically via DHCP
<input checked="" type="radio"/>	Use the following IP address:
IP Address:	192.168.1.230
Gateway:	192.168.1.1
Subnet Mask:	255.255.255.0

IP settings:

Obtain an IP address automatically via DHCP – IP address is received automatically from a DHCP server in the current network. In this case easy way to access the web-server is by entering the following address: <http://iptau> . If you select this mode but after reboot the device cannot find a dhcp server for more than 10 seconds – IP Tau will load the last saved static address.


Use the following IP address – IP address and network parameters are set to static

IP Address – IP address

Gateway –Gateway address.

Subnet Mask – Subnet mask of the IP network.

4.3. Settings for the IP Servers

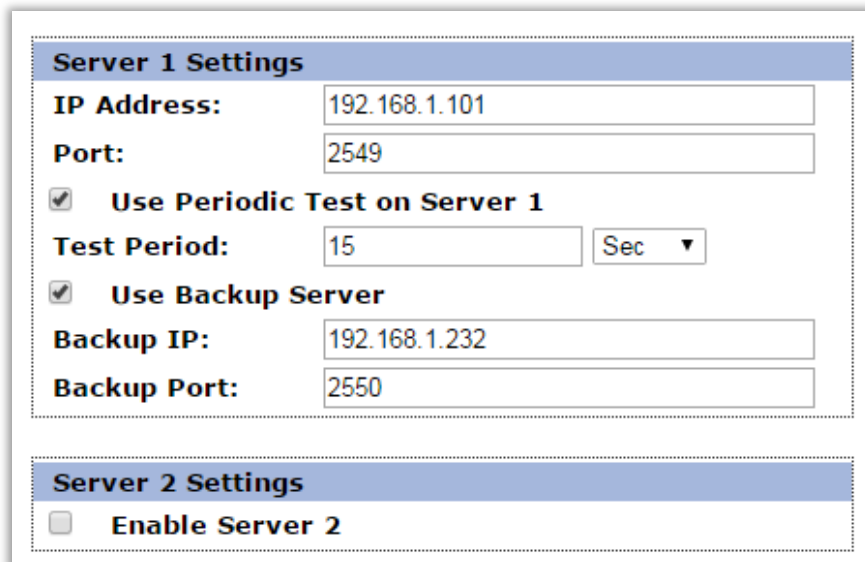

The screenshot displays the configuration interface for IP servers. It is divided into two main sections: 'Server 1 Settings' and 'Server 2 Settings'. The 'Server 1 Settings' section includes fields for 'IP Address' (192.168.1.101) and 'Port' (2549). It also features a checked checkbox for 'Use Periodic Test on Server 1', a 'Test Period' field set to 15, and a unit dropdown menu currently showing 'Sec'. Below these is another checked checkbox for 'Use Backup Server', followed by 'Backup IP' (192.168.1.232) and 'Backup Port' (2550) fields. The 'Server 2 Settings' section is partially visible, showing an unchecked checkbox for 'Enable Server 2'.

Server 1 Settings	
IP Address:	192.168.1.101
Port:	2549
<input checked="" type="checkbox"/> Use Periodic Test on Server 1	
Test Period:	15
	Sec ▼
<input checked="" type="checkbox"/> Use Backup Server	
Backup IP:	192.168.1.232
Backup Port:	2550

Server 2 Settings	
<input type="checkbox"/> Enable Server 2	

The first group is corresponding to the first monitoring server. You must set the **IP address** and the communication **UDP port**. You can activate the periodic test - **Use Periodic Test on Server 1** and set the period. If **Use Backup Server** option is enabled – a secondary **IP Address** could be set. If the server on the primary address is not available – the device will try to send the data to the backup address. This option is usefull if the server has two addresses from different ISPs.

If you want to use the second server you must enable it - **Enable Server 2** – and to set the parameters in the same way as for Server1.

4.4. Settings for the digital inputs

The screenshot displays a configuration window for digital inputs. It is divided into four sections, each with a title bar and a set of fields:

- Digital Input 1 Settings:**
 - Active State: N.C. (dropdown)
 - Type: 140 - General Alarm (dropdown)
 - Partition: 99 (text box)
 - Zone: 901 (text box)
- Digital Input 2 Settings:**
 - Active State: N.C. (dropdown)
 - Type: 130 - Burglary Alarm (dropdown menu is open, showing options: 110 - Fire Alarm, 120 - Panic Alarm, 130 - Burglary Alarm, 133 - 24 Hour Alarm, 137 - Tamper, 140 - General Alarm, 301 - AC Loss, 302 - Low System Battery, 309 - Battery Test Failure, 400 - Open/Close, 401 - Open/Close by User, xxx - Custom Event Code)
 - Partition: (text box)
 - Zone: (text box)
- Digital Input 3 Settings:**
 - Active State: (dropdown)
 - Type: (dropdown)
 - Partition: (text box)
 - Zone: (text box)
- Digital Input 4 Settings:**
 - Active State: Not Used (dropdown)

According to which protocol is selected, in digital inputs settings different fields will become active/deactive.

Digital inputs can be connected to PGM outputs of security panles or to any different kind of sensors – panic-buttons, tampers and etc. In the **Active State** field you can set the working mode of each input – normal close (N.O.) or normal open (N.C.) contact, check for AC on this input (Hardware AC) or you can disable the input (Not Used). When digital input is connected to PGM or dry contact, for ‘0’ state is accepted value of the resistance to ground less than 300Ω and for active ‘1’ – value more than 1,4KΩ (or open circuit), the hysteresis is between 300Ω and 1,4KΩ. If digital inputs are controlled by voltage for ‘0’ state is accepted value of the voltage to ground less than 0,7V, and for active ‘1’ – value more than 2,6V, the hysteresis is between 0,7V and 2,6V.

Type – Choose a message which will correspond to the change of state of this input

Partition (from 0 to 15) and **Zone** (0 to 255) determines the corresponding parameters for the messages generated from each digital input.

4.5. Saving the new configuration

When you click the Save Config button a validation check is performed. If there is invalid data in one or more fields – they will be colored in red. Additionally under the button **Save Config** a field will be generated – **Error List** – which describes in details the errors and how to fix them. If all the input data are correct IP Tau will save the parameters and will reboot with the new configuration.

5. Username and password configuration

Inova-bg Ltd

IP Tau - Ethernet Security

Home
Device Config
Login Config
Utility
About
Reboot

Login Configuration

CAUTION: You will need this information to access this page. Use the "Hard Reset" button if you can't remember your Login information. After Reset default Username and Password will be recovered.
Default Username: **root** Password: **admin**

Enter the new Login settings below (**maximum 11 symbols**):

Login Settings	
User Name:	<input type="text" value="root"/>
Password:	<input type="text" value="admin"/>


Copyright © 2016 Inova-bg, Ltd.
IP Tau, ver: 1.0

In **Login Config** menu you can change the username and password used to access the web-server. Maximum length for both fields is 11 symbols. If you forget your credentials you can perform a hardware reset to recover default settings:

Username: root Password: admin

When you click the Save Config button a validation check is performed. If there is invalid data in one or more fields – they will be colored in red. If all the input data are correct IP Tau will save the parameters and will reboot with the new configuration.

6. Utility

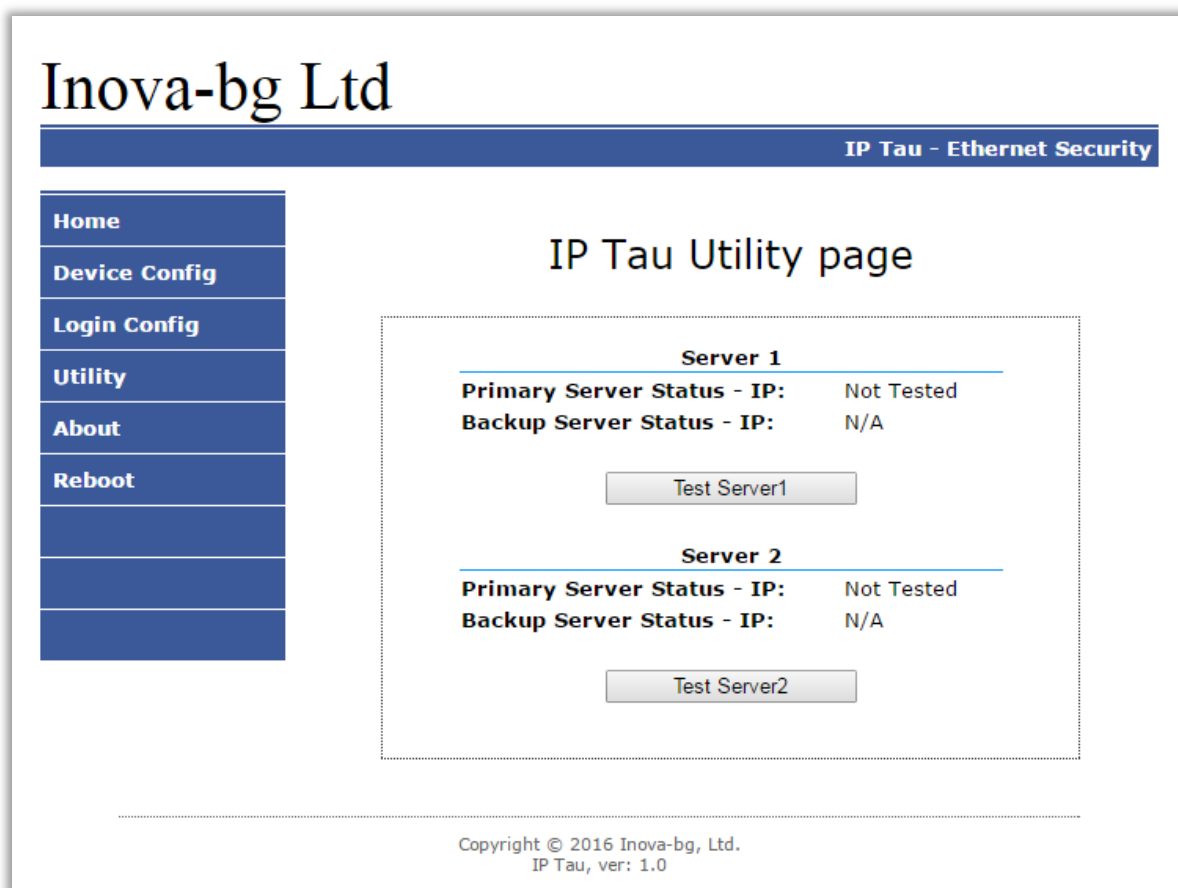

In **Utility** menu, connections to the servers can be tested. When the test button is clicked the device will send test messages to the server. If a backup server is enabled – the device will test this connection also.

7. Reboot




If you choose the **Reboot** menu this will cause the device to restart.

8. Hardware reset

In case you changed the settings and can't reach the device or if you forgot your username or password, IP Tau is capable to return to its factory defaults. For this purpose you must disconnect from power supply, push and hold the button for hardware reset and reconnect to the power supply. Hold the button for 5 seconds until the green LED is blinking. Once the LED goes off you can release the button and connect to the device.


9. Hardware Connections

9.1. Hardware AC

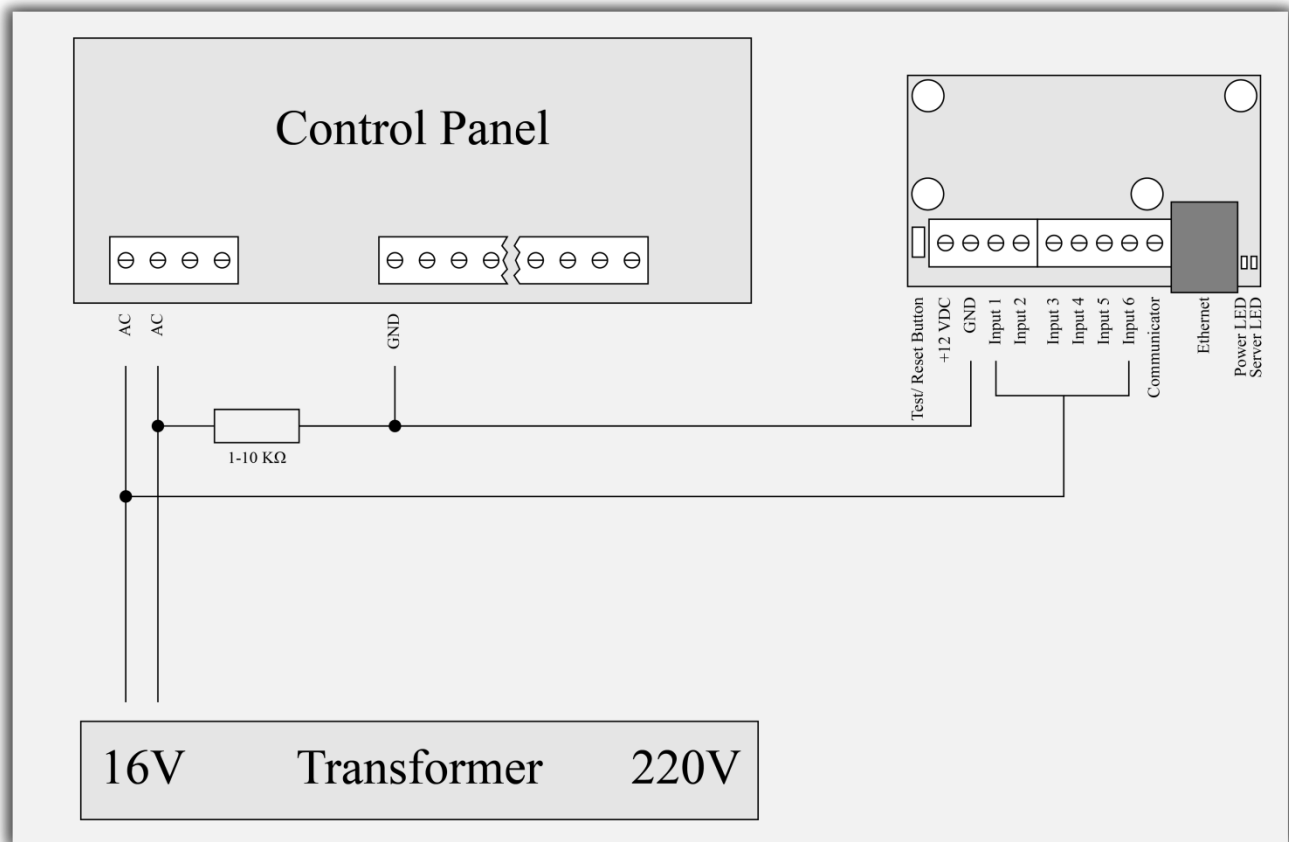

Each of the digital inputs could be used as a “Hardware AC” input. In this mode it will monitor the AC and generate a message for “AC Loss/AC Restore”.

9.2. Communicator/Dialer connection

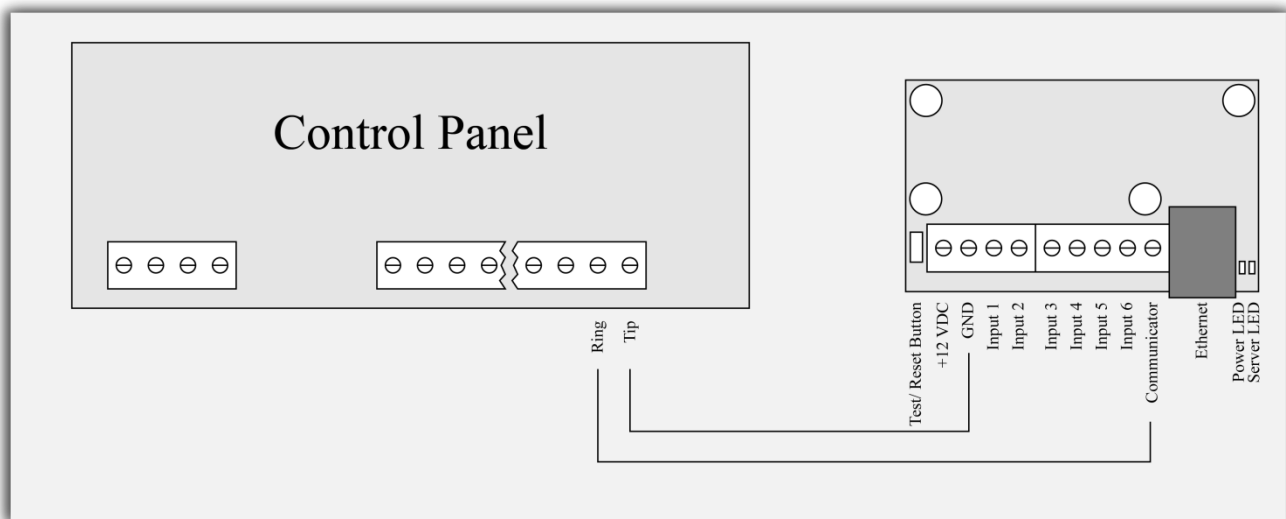

IP Tau has a built-in communicator/dialer receiver. It can receive data from each security panel with communicator/dialer option. Settings for the security panel (in some models additional settings may also need to be made):

Phone Number: **9**
Protocol: **Ademco Contact ID**
Wait Dialtone: **Disable**

10. Windows Network configuration

If you want to access the web-server, your computer must be in the same IP subnet. You must change the settings of your network adapter (if they are different than needed).

If your computer is in a different network than: 192.168.1.xxx with mask 255.255.255.0 you will need to change your current configuration of Windows network:

Start → Control Panel → Network and Sharing Center → Change adapter settings → Right-Click on your network adapter → Properties → Right-Click on Internet Protocol Version 4 → Properties → Use the following IP address

IP Address : 192.168.1.xxx, xxx is between 2 and 254 and must be different than 230
 Subnet Mask: 255.255.255.0